



FOREST RIVER BUS

Maintenance Schedule

Intervals based on hours or miles, whichever comes first. Please refer to chassis Owner's Manual for additional information.

Inspection or Service Item		Inspect Daily	Inspect Weekly	350 Hrs or 3000 mi	700 Hrs or 6000 mi	1050 Hrs or 9000 mi	1400 Hrs or 12000 mi	1750 Hrs or 15000 mi	2100 Hrs or 18000 mi	2450 Hrs or 21000 mi	2800 Hrs or 24000 mi	3150 Hrs or 27000 mi	3500 Hrs or 30000 mi	3850 Hrs or 33000 mi	4200 Hrs or 36000 mi
5. Front Axle and Suspension	Check alignment and pivot points for wear.			X		X			X		X		X		X
	Check front shocks for leaks or worn bushings.						X			X			X		
	Check axle and mounting for any damage, looseness and worn parts.		X				X			X			X		
6. Rear Axle and Suspension	Check rear shocks for leaks or worn bushings.		X				X			X			X		
			X				X			X			X		
7. Transmission	Check exterior of transmission for fluid leaks		X				X			X			X		
	Check lines and fittings for leakage or looseness, and lubricate linkage		X				X			X			X		
	Check Transmission fluid level.	X													
8. Brakes	Check Master Cylinder fluid level	X													
	Check linings and drum/rotor condition. Inspect hoses and fittings.			X		X		X		X		X		X	X
9. Tires	Check tire pressure, including spare.		X				X			X			X		
	Inspect tires for cuts, bulges or other damage.		X				X			X			X		
	Rotate Tires							X					X		
	Check wheel studs and nuts for damage and proper torque. Inspect rims for damage.		X				X			X			X		
10. Fuel System	Check lines, tank for damage. Check for leakage and loose hardware.		X				X			X			X		
	Check for water in fuel (Diesel), dirt in filter.		X				X			X			X		
Inspect and replace fuel filter - See Chassis Owners Manual															
11. Drive Shaft	Check drive shaft guards for damage or broken welds.			X		X		X		X		X		X	X
	Inspect Drive Shaft for damage, looseness or other damage.							X					X		
12. Engine	Inspect cooling system for loose hose clamps, obstructions to radiator, leakage or other damage.		X				X			X			X		
	Inspect Air Filter for excessive dirt. Replace if needed.		X				X			X			X		
	Inspect engine cooling fan, belts, pulleys for damage or looseness. Repair/replace as needed.			X		X		X		X		X		X	X
	Change Engine Oil and filter	See Chassis Owner's Manual. Suggested Change Interval is 3000 miles.													
	Inspect engine mounts, exhaust manifolds for looseness or damage.							X					X		
13. Electrical	Inspect Battery for loose terminals, corrosion.						X				X				X
	Check all exterior lights for proper operation and damage.	X													
	Check all interior lights for proper operation and damage.	X													
	Check headlights for proper operation and aim.		X				X			X			X		
	Check wiring grounds for corrosion and looseness.		X				X			X			X		
	Check electrical panel for loose or damaged terminal connections.		X				X			X			X		
14. Dash and Rear Heater, A/C	Check all heater controls, including defroster for proper operation.	X													
	Inspect rear heater(s) for damage, leaks and obstructions.						X			X					X
Refer to Owners Manual from Chassis Mfg., or Air Conditioner Mfg. manual for A/C service information.															
15. Misc.	Check horn, hazard lights, back-up alarm for proper operation.	X													
	Cycle Wheelchair Lift through full cycle, check interlock.	X													
	Check engine oil, power steering fluid level, and parking brake operation.	X													

Note: Most operation of buses falls under Severe Usage in Chassis Owner's Manual due to urban stop-and-go type of use normally associated with this type of vehicle.